

OUTSIDE THE WIRE (OTW) GOGGLES

REV071323

AUTHORIZED
PROTECTIVE
EYEWEAR
LIST (APEL)
APPROVED



Maximum Ballistic Protection with Superior Optical Clarity

When the task at hand requires maximum ballistic protection, the Outside The Wire (OTW) Goggle offers superior optical clarity and a custom fit strap system to keep your eyes protected in any condition.

Maximum light allowance for all weather conditions with an additional neutral tint gray lens for reduced glare in bright & variable light conditions.

100% protection from harmful UVA/B/C rays. Meets US standard MIL-DTL-43511D, ANSI Z87.1-2003 AND EN166 standards. Features superior field of vision, anatomically optimized design for seamless Helmet integration & face fit and tapered lens to correct distortion. Anti-fog & scratch resistant coating on all lenses.

Features:

- Superior ballistic impact protection per US MIL-DTL-43511D standard
- Uncompromising optics and coverage per ANSI Z87.1
- Anatomically optimized design for seamless helmet integration and face fit
- (TLT) Tapered Lens Technology corrects distortion
- Flame resistant anti-microbial goggle foam
- Anti-fog and scratch resistant coatings on all lenses
- 100% protection from UVA/UVB rays

Specifications:

- Goggles: W 7.5 in. x H 2.75 in.
- Case: L 8.75 in. x W 3.5 in. x H 3 in.
- Weight: 1.10 lbs

OTW Goggles

ITEM #	NSN #
90-0066	----




FIELD OF VIEW:

The OTW goggle was designed to maximize overall field of view. Using CAD technology and over 40 years of mold making knowledge, we have increased the peripheral field of vision on the OTW exceeding the competition to give you every advantage while maximizing protective coverage.

SMITH ELITE OTW GOGGLE — ENHANCED PERIPHERAL VIEW

COMPETITOR'S FIELD OF VIEW

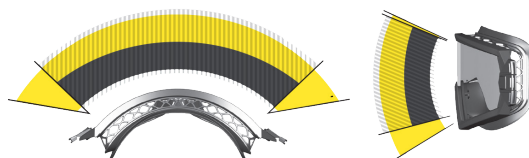

NORTH AMERICAN RESCUE®

www.NARescue.com • 888.689.6277

PRODUCTS
WITH A **MISSION®**