

TACTICAL HIP BELT - II *Coyote*


A multi-disciplinary tactical harness for use in various operational environments.

NAR & Edelrid have joined forces to bring the new Edelrid Tactical Harness to the US. Edelrid is the industry leader with 150 years of experience in rope and climbing gear manufacturing. A full customer solution, the tactical harness system is not only an emergency harness, but it can also be fully used as a climbing harness and can be worn comfortable loaded or unloaded.

Key Differentiators: single tie-in attachment point, sized to integrate into standard pant loops, no carabiner needed to connect belt to leg loops, triple lock safety buckle, integrates into or under any battle belt, built in indicator threads inside webbing for visual on wear, sleek, smooth and easy to use.

Features:

- No carabiner needed to connect belt and leg loops which integrate thru belt tie-in loop
- Hip belt can be threaded into any battle belt and is also compatible for everyday use with any 2" size and up pant loops
- Hip belt and leg loops can be fully opened with the Triple Lock buckle
- Waist belt includes hook and loop cover for the attachment of various bags and accessories
- Hip belt features tie-in loop, fully certified and with easy stow away capability when not in use
- Tie-in loop has breaking strength of 22kN and can be used as a single point of attachment
- Red indicator threads inside belt load bearing webbing show the end of belt service life
- White indicator threads inside webbing show the end of tie in loop service life
- Tested to EN 358
- In combination with leg loops, certified according to EN 12277 Typ C

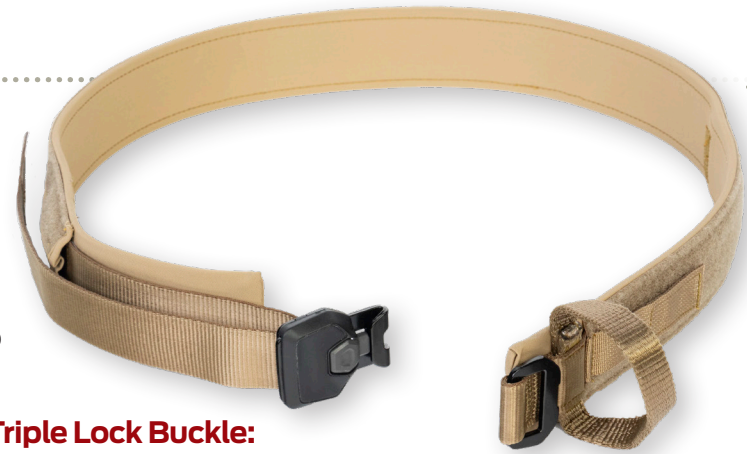

Triple Lock Buckle:

- The Triple Lock buckle is the safest and most innovative buckle in Edelrid's line of products
- Triple buckle requires 3 step release, unload (press bar release) for webbing to loosen, press the large release button, push buckle together and angle the buckle outward to release catch from buckle closure. *(see educational materials below for more data and visuals)
- Under load the buckle cannot open inadvertently but with release bar can be loosened not under load to aid in buckle release
- Although a very safe buckle it is still very fast and effective to use
- Large push button release can be manipulated with gloves on
- The webbing release bar prohibits loosening of webbing during load and also when unloaded
- All homogenous metal parts to avoid corrosion
- Saltwater resistant

Specifications:

- Waist Dimensions: 79 cm - 109 cm
- Weight: 0.60 lbs

Tactical Hip Belt - II

SIZE	ITEM#
Small	90-4028
Medium	90-4046
Large	90-4047
X-Large	90-4048



NORTH AMERICAN RESCUE®

www.NARescue.com • 888.689.6277

PRODUCTS
WITH A **MISSION®**

REVI01923