

OLYMPUS SERIES *Pegasus Ropes*®

REV103024

Ideal Rope For Use In Challenging and Abusive Environments.

Canyoneering, mountaineering and caving represent some of the most challenging and abusive environments for safety equipment on the planet.

NAR® has designed a line of durable, lightweight and great handling ropes that offer reliability in all weather conditions. Whether it's raining, submerged in salt water or -40°F, Pegasus ropes always perform. Olympus is engineered for rough terrain and sharp edges by offering a thick and highly twisted Technora sheath for added strength and excellent abrasion resistance. The Innegra core is ultra-lightweight and strong, allowing the rope to have a dependable core that is so bouyant that it floats with the thicker sheath. Combining these two high performance fibers creates the ultimate in advanced rope performance.

PEGASUS cores are all designed with Innegra™ S, a new and innovative advanced fiber that gives Pegasus ropes the same physical & mechanical properties – whether wet, dry or even exposed to chemicals. This breakthrough technology has an impressive strength-to-weight ratio, making it the lightest structural fiber available today. Innegra's unique composition also provides great thermal properties when used in hot or cold environments. For the first time you can be confident that the backbone of your rope's system, your core, will perform regardless of environmental challenges.



Innovative Synergy of 2 unique Fibers engineered for unmatched Confidence & Resilience from Ropes in Challenging Environments...


**INNEGRA
CORE**



Olympus Series™ Pegasus Ropes®



DIA.	LENGTH	COLOR	RUNNER	ITEM #	NSN #
9.5 mm	100 ft.	Gold	Blk/Red	90-1401	----
9.5 mm	200 ft.	Gold	Blk/Red	90-2401	----
9.5 mm	300 ft.	Gold	Blk/Red	90-3401	----

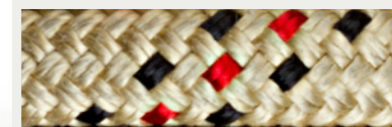

NORTH AMERICAN RESCUE®

www.NARescue.com • 888.689.6277

PRODUCTS
WITH A **MISSION®**

OLYMPUS SERIES *Pegasus Ropes*[®]

REV103024


Features:

- Technora sheath for abrasion, cut resistance & heat resistance
- Innegra core for reliable strength, durability & flotation whether wet, dry or contaminated
- Easy to knot with a great feel
- Easily stored and deployed from stuffed sack
- Low stretch – wet or dry
- High strength to weight ratio – wet or dry
- Ultra-lightweight
- High Strength
- Hydrophobic
- UV Stable
- Chemically Inert
- Cut Resistant
- Low Creep
- Bouyant
- Low Dielectric

Rope Specifications:

- Diameter: 9.5mm
- Weight: 3.82 lb per 100 ft
- Elongation: 1.6%
- Tensile Strength: 5,495 lbf (24.4 kN)
- Fibers (core/sheath): Innegra[™]/Technora
- Sheath Ratio: 62% Technora

STRENGTH
that DEFIES GRAVITY[™]

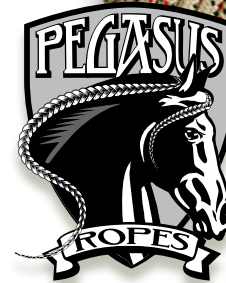

NORTH AMERICAN RESCUE[®]

www.NARescue.com • 888.689.6277

PRODUCTS
WITH A **MISSION[®]**