

# TRITON ROPE *Pegasus Ropes*®

REV103024

***Triton is specially designed for water rescue professionals and as a high quality tag line.***

Featuring 100% Innegra™ fiber braided core which is the lightest structure fiber available giving Triton additional buoyancy, low elongation and consistent strength. The sheath is made of high quality polypropylene that adds additional flotation and protection to the core. The combination of these materials give you a high strength and durable rope that is soft to the touch and can be easily stored in throw or rope bags. Triton is also used as a tag line for rescue operations.

Pegasus Ropes® cores are all designed with Innegra™ S, a new and innovative advanced fiber that gives Pegasus Ropes® the same physical & mechanical properties – whether wet, dry or even exposed to chemicals. This breakthrough technology has an impressive strength-to-weight ratio, making it the lightest structural fiber available today. Innegra's unique composition also provides great thermal properties when used in hot or cold environments. For the first time you can be confident that the backbone of your rope's system, your core, will perform regardless of environmental challenges.



**PRODUCTS**  
WITH A **MISSION**®



### ***Triton Rope - Pegasus Ropes***®

DIA.	LENGTH	COLOR	RUNNER	ITEM #	NSN #
7.5 mm	100 ft.	Yellow	Blue/Refl.	90-1303	----
7.5 mm	200 ft.	Yellow	Blue/Refl.	90-2303	----
7.5 mm	300 ft.	Yellow	Blue/Refl.	90-3303	----



**NORTH AMERICAN RESCUE**®

[www.NARescue.com](http://www.NARescue.com) • 888.689.6277



# TRITON ROPE *Pegasus Ropes*®


REV103024

## Features:

- 10% lighter & 250% stronger than polypropylene alone – specially designed for water rescue professionals and as a high quality tag line
- 100% Innegra™ fiber braided core provides additional buoyancy, low elongation and consistent strength
- High quality polypropylene sheath adds additional flotation and core protection
- Soft to the touch & easily stored in throw or rope bags
- High strength-to-weight ratio, low stretch, low sheath slippage – wet or dry
- Chemically resistant to acids, bases & common industrial chemicals
- Low dielectric & UV stable
- Ideal for use as a tag line for rescue operations
- Hydrophobic
- Chemically Inert
- Cut Resistant
- Low Creep
- Bouyant

## Rope Specifications:

- Diameter: 7.5mm
- Weight: 2 lb per 100 ft
- Rope MBS (Dry Break): 3,050 lbf (13.6 kN)
- Rope MBS (Wet Break): 3,050 lbf (13.6 kN)
- Fibers (core/sheath): Innegra™/Polypropylene
- Sheath Ratio: 46% Polypropylene
- Ratings: NFPA 1983/2012 Throwline (Pending)

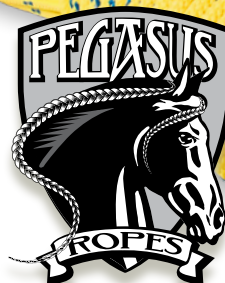

**STRENGTH**  
*that DEFIES GRAVITY™*



**NORTH AMERICAN RESCUE®**

[www.NARescue.com](http://www.NARescue.com) • 888.689.6277

**PRODUCTS**  
WITH A **MISSION®**

